

4 Year Limited Warranty

Please take time to read about the protection we offer you.

All our products come with a guarantee designed to protect you as our valued customer. ZEMPIRE® Camping Equipment will repair or replace this product, at their discretion, should it fail due to faulty materials or manufacture for a period of 4 years from the date of purchase.

The Guarantee is subject to the following conditions:

1. The Guarantee only applies to an original purchaser who purchased this product in an unopened condition from an approved retail outlet.
2. The Guarantee does not apply if the product has been used for anything other than reasonable personal use. Commercial use (e.g. rental) or continuous use are expressly excluded.
3. Damage due to normal wear and tear, accident, acts of God, negligence (other than by ZEMPIRE® Camping Equipment), failure by the purchaser to ensure instructions for setting up and care are observed, deterioration due to abnormal exposure to ultraviolet light, insect or mildew attack, or any other cause reasonably beyond the control of ZEMPIRE® Camping Equipment are not covered.
4. If redress is sought under the terms of this Guarantee, then the product must be returned by the purchaser to the outlet from where it was purchased within the Guarantee period, in a clean, dry state and with proof of purchase.
5. All transport costs and any other indirect costs are excluded from the Guarantee.
6. ZEMPIRE® Camping Equipment reserves the right to make a reasonable charge for repairs which it determines are not within the scope of the Guarantee.
7. The Guarantee does not limit, modify or exclude any rights under any law if doing so would contravene that law or make any part of this Guarantee invalid. However, ZEMPIRE® Camping Equipment:
 - a) excludes (to the extent permitted by applicable law) all conditions and warranties that might otherwise be implied; and
 - b) limits its liability for breach of any such condition or Guarantee that it cannot exclude together with its liability under the Guarantee, to repairing or replacing the Goods or paying the cost of having the Goods repaired or replaced (at ZEMPIRE® Camping Equipment's option).

Australia Only

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

USA Only

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

Europe Only

The consumer has legal rights under applicable national legislation governing the sale of consumer goods and those rights are not affected by the guarantee.

All warranty claim processes are explained on our Zempire® website. Please go to www.zempire.co.nz, select your location and follow the instructions to lodge a warranty claim.

International Distributors:

New Zealand & Australia

ZEMPIRE® Camping Equipment
6 Karewa Place, Pukete,
Hamilton, 3200, New Zealand
Ph: +64 7 848 1610

United Kingdom, Belgium, Netherlands & Luxembourg

Outdoor & Sports Company Ltd.
Redfern House, Dawson Street
Hyde, Cheshire, SK14 1RD, UK
Ph: +44 161 366 5020

North America

Outdoor & Sports Company Inc.
610 Alden Road Unit 101
Markham, ON, L3R 9Z1, Canada
Ph: +1 905 940 9511

Germany, Austria, & Switzerland

Sport-tech
Goldbeckstrasse 6
69493 Hirschberg, Germany
Ph: +49 6201 8439710

South Korea

Coldspin Corporation
20 Gurodong-ro 15-gil
Guro-gu, Seoul,
South Korea
Ph: +82 2 3397 7711

Designed and tested in New Zealand. Made with care in China.

Zempire® **PRO TXL** ^{V2}
CAMPING EQUIPMENT AWNING WALL SET

PITCHING INSTRUCTIONS



Pro TXL^{V2} Awning Wall Set – Awning with Mesh Wall

INS-0226832-000A

For a detailed description of all the features and specifications of this product please visit our website.

WWW.ZEMPIRE.CO.NZ

Zempire®
CAMPING EQUIPMENT

CARE INSTRUCTIONS

1. Ensure guy ropes are out at all times during use.
2. Never pack your tent away wet. If you must take your tent down when wet, ensure that it is dried completely as soon as possible to prevent mildew forming.
3. If mildew does form on your tent, wash off with warm water and a soft brush to prevent further growth. Do not use soap or detergents.
4. Do not use aerosol spray cans or an open flame inside your tent. The fabric has been treated with a fire retardant but is in no way fire-proof.
5. Always use a peg puller to remove pegs. Never remove pegs by pulling the shelter or peg loops; always clean and dry pegs before storing.
6. This tent is not designed to withstand storm conditions. During a severe storm, it is recommended that the shelter be taken down.
7. Do not leave your tent pitched unnecessarily for extended periods of time. UV light damages the fly and will shorten the life of your tent.

ATTACHING THE WALL

Use the steps below for both the solid wall and mesh wall.

NOTE: Only one wall can be zipped on at a time.

1. Lay the wall out flat in front of your pitched tent.
2. On the left side (facing the front of the tent) attach the zip end through both zip sliders on the tent.
3. Pull the zip closed, lifting the wall as you go to reduce tension on the zip.
4. Peg out the front corners of the wall so that the panels are evenly tensioned.

NOTE: To make the front door easier to access, the "anchor webbing Y-strap" can be converted to a single strap. To do this, unclip the outer buckle on the Y-strap and secure the outer side using the clip located below the inner side's buckle. You may need to adjust the angle and tension of the anchor webbing to suit this single strap configuration.



Pro TXL^{V2} Awning Wall Set – Solid Wall



Pro TXL^{V2} Awning Wall Set – Mesh Wall

Anchor Webbing Y-strap

USING THE SOLID WALL AS AN AWNING

It is possible to attach the solid wall as an awning to provide additional shade and shelter. This is possible with or without the mesh wall attached (see images below).

1. First attach the buckles at the top of your awning wall to the corresponding buckles on the front of the tent found between the front tube and awning valance.
2. Remove the two "anchor webbing Y-straps" from the front of the tent.
3. Attach each anchor webbing strap to the corresponding buckles on the bottom of your wall. To convert your Y-strap to a single anchor strap, you will need to secure one side of the Y-strap to the clip located below the inner side's buckle.
4. **Assemble the awning poles:**
Pro TXL^{V2} Wall Poles = 2 x 3 Long Sections, 1 x 4 Short Sections
Pro III/II^{V2}, Pro TL^{V2} Wall Poles = 2 x 3 Long Sections
5. Insert an awning pole through each eyelet on the awning wall.
6. Peg out and adjust the webbing straps to tension the wall/awning.

NOTE: For extra shelter, attach a guy rope to the steel ring on each side of the awning wall and tension. The TXL^{V2} Wall will also require an additional guy rope for the center awning pole.



Pro TXL^{V2} Awning Wall Set – Awning



Pro TXL^{V2} Awning Wall Set – Awning with Mesh Wall

NEED HELP WITH YOUR TENT?

We have a range of videos on our website which can help you.

Follow the QR code or type the link below in your browser. We suggest to check out our videos beforehand in case you don't have service at your holiday destination.



**TO THE
VIDEO
GALLERY**

ZEMPIRECAMPING.INFO/VIDEO-GALLERY