

WARRANTY

1 Year Guarantee

Please take time to read about the protection we offer you

All our products come with a guarantee designed to protect you as our valued customer. Flow Imports Ltd., the makers of ZEMPIRE® Camping Equipment, will repair or replace this product, at their discretion, should it fail due to faulty materials or manufacture for a period of 1 year from the date of sale.

The Guarantee is subject to the following conditions:

1. The Guarantee only applies to an original purchaser who purchased this product from an approved retail outlet.
2. The Guarantee does not apply if the product has been used for anything other than reasonable personal use. Commercial use (e.g. rental) or continuous use are expressly excluded.
3. Damage due to normal wear and tear, accident, acts of God, negligence (other than by Flow Imports Ltd.), failure by the purchaser to ensure instructions for setting up and care are observed, deterioration due to abnormal exposure to ultraviolet light, insect or mildew attack, or any other cause reasonably beyond the control of Flow Imports Ltd. are not covered.
4. If redress is sought under the terms of this Guarantee, then the product must be returned by the purchaser to the outlet from where it was purchased within the Guarantee period, in a clean, dry state and with proof of purchase.
5. All transport costs and any other indirect costs are excluded from the Guarantee.
6. Flow Imports Ltd. reserves the right to make a reasonable charge for repairs which it determines are not within the scope of the Guarantee.
7. The Guarantee does not limit, modify or exclude any rights under any law if doing so would contravene that law or make any part of this Guarantee invalid. However, Flow Imports Ltd.:
 - a) excludes (to the extent permitted by applicable law) all conditions and warranties that might otherwise be implied; and
 - b) limits its liability for breach of any such condition or Guarantee that it cannot exclude together with its liability under the Guarantee, to repairing or replacing the Goods or paying the cost of having the Goods repaired or replaced (at Flow Imports' option).

This product has been made with meticulous care and attention to detail. Providing it's properly looked after and correctly stored, it will help you enjoy all that nature has to offer for years to come.

Get out more – you owe it to yourself!

For a detailed description of all the features and specifications of this product please visit our website.

WWW.ZEMPIRECAMPING.COM

Tested in New Zealand. Made with care in China.

ZEMPIRE® CAMPING EQUIPMENT SOLID GROUND SHEET

GENERIC INSTRUCTIONS

For all ZEMPIRE® Solid Ground Sheets



INSTRUCTIONS

Your ground sheet is designed to protect the tent floor from dirt and damage. Ground sheets also make packing up your tent cleaner and faster.

Your ground sheet is made from durable PE material.

1. Test run

Practice pitching your tent and ground sheet at home to ensure you understand the process.

2. Unpacking

When taking your ground sheet out for the first time, take a moment to see how it is packed or take a photo on your phone. This will help you when packing away. You will notice a fabric panel with a logo at one end of the groundsheet. The logo panel should face up, and marks the front awning entrance of your tent.

3. Pick a site

Use your ground sheet as a template to find an ideal site before unpacking your tent.

When finding a site for your tent, try to find an area that is sheltered, flat, and free from sharp objects. If possible, position your tent with the front door facing away from the prevailing wind. Also, avoid pitching your tent under trees as falling branches can damage the tent and falling sap can damage the fabric.

4. Layout

Unroll the ground sheet with the logo facing up. Once oriented correctly on your chosen site, peg out the corners, ensuring there is tension between each point and that the floor sits as flat as possible. Peg the remaining peg points around the ground sheet. For best results, pegs should be angled away from your ground sheet at 45°.

5. Pitch your tent

Lay your tent on top of your ground sheet and position the tent so its edge sits outside the perimeter of your ground sheet. (Your ground sheet is sized slightly smaller than the tent floor). Inflate/pitch your tent as normal.

6. Packing away

When rolling your ground sheet away, lay the carry bag down at one end and fold the ground sheet to 3/4 the length of the bag. Place the peg bag on top of the folded groundsheet and roll tightly toward your carry bag. Place in carry bag and secure with drawstring.

NOTE: To prevent mildew, ensure that your ground sheet is dry when packing away. If you must pack your ground sheet away wet, ensure that it is dried completely as soon as possible, mildew can develop within a few days.

Care Instructions

1. Do not store your ground sheet dirty. Clean your ground sheet by rinsing with warm water and scrubbing with a soft towel or brush.
2. Never pack your ground sheet away wet. If you must pack your ground sheet away when wet, ensure that it is dried completely as soon as possible to prevent mildew forming.
3. If mildew does form on your ground sheet, wash off with warm water and a soft brush to prevent further growth, do not use soap or detergents.
4. This ground sheet is not intended to be used as a shelter or shade sail.